 
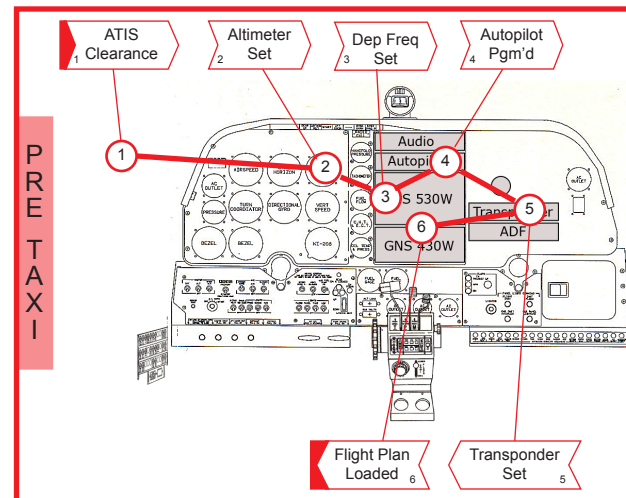 
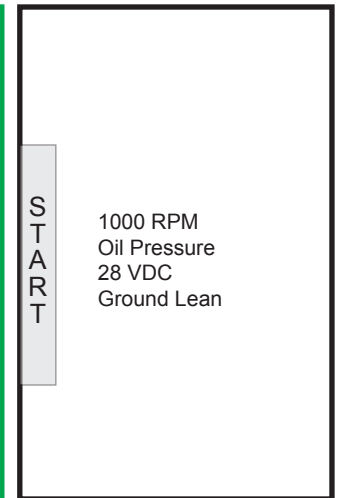 
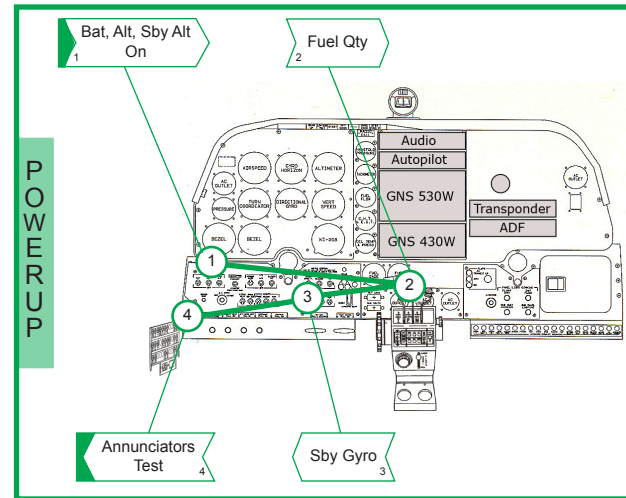 


Standby Alternator Check

Bat, Alt, Sby Alt	ON
Primary Alt	OFF
Sby Alt Ann	ILLUMINATED
Loadmeter	STANDBY
Loadmeter	CHECK
Loadmeter	PRIMARY
Primary Alt	ON
Loadmeter	CHECK
Annunciators	EXTINGUISHED

Runway Trim Procedure

Press and Hold *AP Disconnect*
 Manually Adjust *Trim*
 Pull *Servo Power Circuit Breaker*
 (4th from right)
 Release *AP Disconnect*

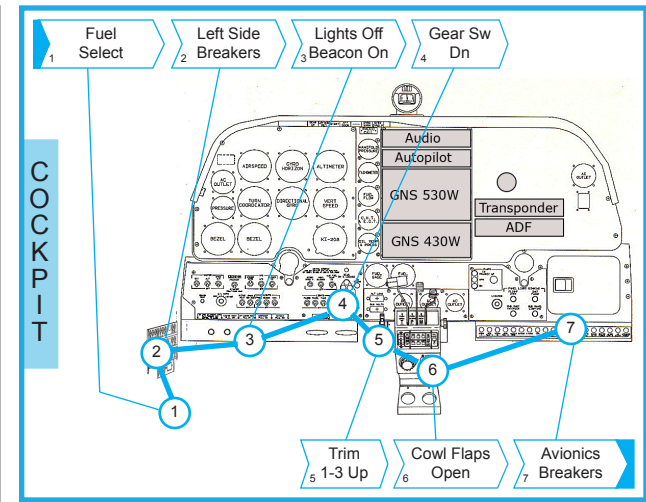

Autopilot Program

Set Departure Altitude
 ARM
 VS
 Set +700 fpm